



Geolam Hybrid Aluminum/WPC Architectural Trim Maintenance Guide

How to repair a surface scratch




Step 1/5

Collect some composite material on a profile, warm up the soldering iron.




Step 2/5

Put the composite wood on the scratch. Hold it with your finger or use an adhesive tape.

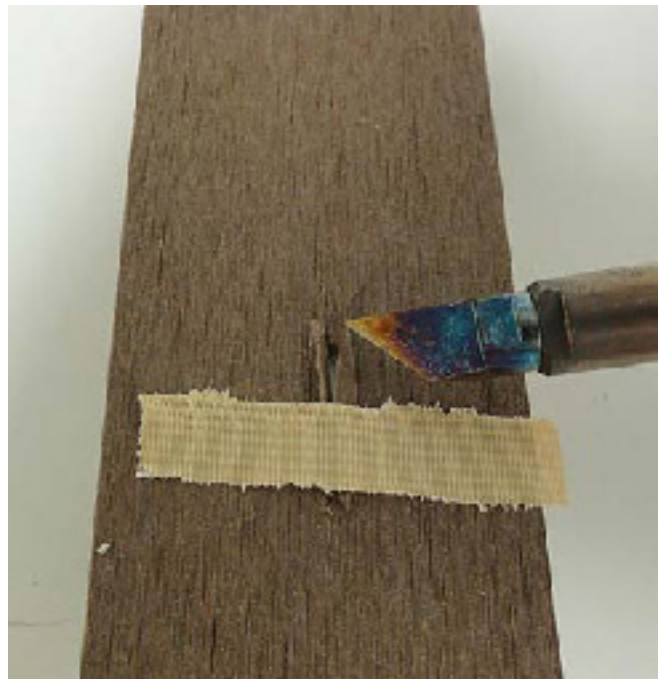

Step 3/5

Spread the composite wood on the scratch using a soldering iron, the wood fiber sticks.

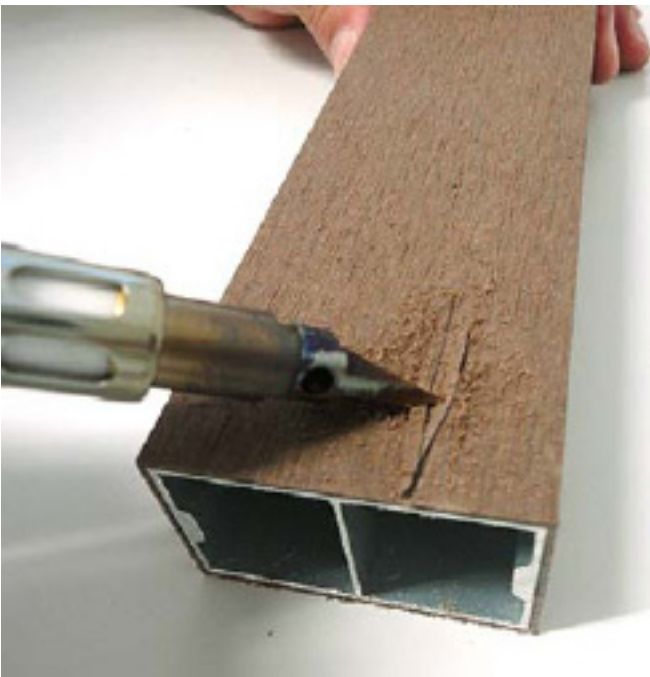

Step 4/5

Aspect before sanding.



Step 5/5

Use a 40 or 60 grit sandpaper for sanding.

